



45A COOKER SWITCH & 13A SOCKET

WARNING Never take risks with electrical safety. Always disconnect the mains power before beginning any electrical work and test that it is isolated - it is NOT enough just to turn off the light switch. Electrical products must be installed in accordance with IET regulations (BS 7671). If you are in any doubt, always consult a qualified electrician or an experienced person registered with an electrical Competent Person Scheme. Further information is available online or from your Local Authority. If the lighting circuit is not protected by a Residual Current Device (RCD) then the installation should be carried out and tested by a qualified electrician. If necessary, use a suitable stepladder, but first read the useful advice given by the Health and Safety Executive. Visit www.hse.gov.uk and search for 'using stepladders'.


Your cooker switch and mains socket

Your cooker switch & mains socket is suitable for indoor use only; it fits a standard UK double gang wall box. The wall box should have a minimum of 35mm (preferably 45mm) depth to allow enough space for connections once the socket is screwed into place.

Note: This product must be installed in accordance with local building regulations.


IMPORTANT: If you are in any doubt, STOP and seek professional help. Do not proceed unless you are sure.

If fitted, remove the front cover from your switch. Insert a small flat blade screwdriver into one of the base slots and carefully prise off the front cover.

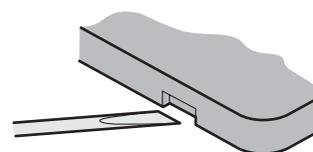

To fit your cooker switch and mains socket

- 1 Ensure that the mains supply to the circuit is isolated.
- 2 Remove the two screws securing the existing switch.
- 3 Take a photo of the connections to its terminals. There should be two sets of (Live, Neutral and Earth) wires; one set are the supply and the other set leads to your cooker. You need to determine which is which and connect them to the new switch accordingly.
- 4 Disconnect the wires from the existing switch and remove it from the installation.
- 5 Connect the wires to your new switch in the same way that they were connected to the previous switch.
- 6 Ensure that the bare copper earth connections have green/yellow sleeves to isolate them from other connections. Check that screw terminals are properly tightened and no bare wires are visible.
- 7 Use the two supplied screws to fix the panel in place to the wall box.
- 8 Finally, fit the front cover onto the panel so that it clips into securely into place, concealing the fixing screws.

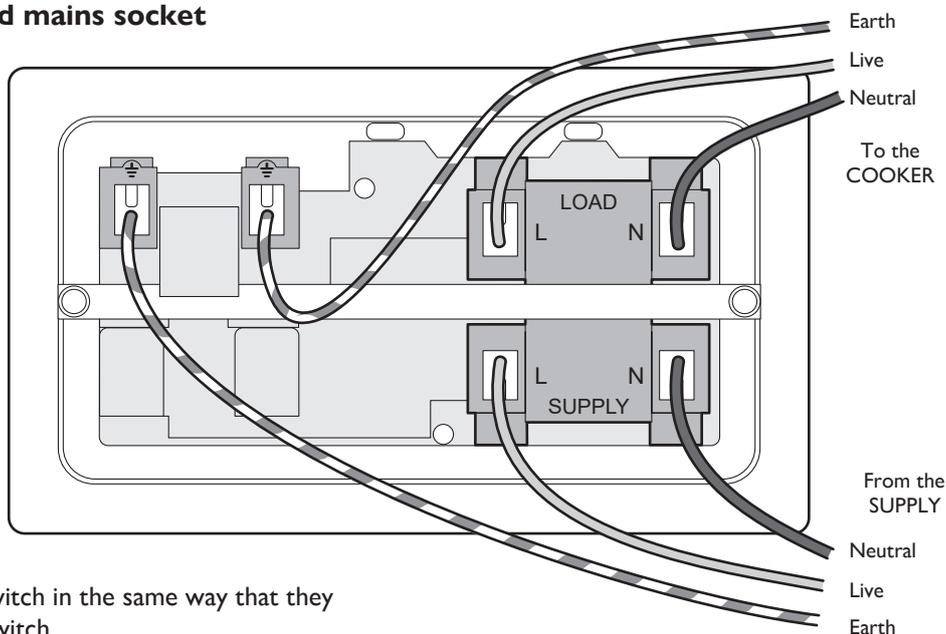

Connection	Old wire colours	New wire colours	Diagram shading
Live (L)	Red	Brown	
Neutral (N)	Black	Blue	
Earth (±)	Green	Green/Yellow	